




HOW TO CHANGE THE FLEXOR OF ROTTEFELLA PERFORMANCE BINDINGS

REMOVING THE FLEXOR

Turn the binding housing, with the underside of the housing facing up.

Locate the hole - marked in the image below.

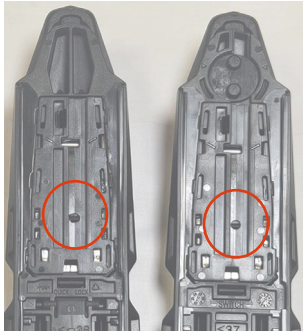

Place a screwdriver into the hole and press firmly. The flexor will pop out of the binding housing.



REPLACING THE FLEXOR

Place the flexor into the binding housing with a slight angle. Make sure to push it all the way in.



Push down firmly in the recessed area between the front and back flexor, as illustrated below.

You should hear the flexor click into place.

