




QUICKLOCK PRO & QUICKLOCK TOURING IFP*

Disclaimer – Binding Plate Installation


Rottefella bindings are designed and manufactured to meet the highest standards of performance and safety. At all times must Rottefella's manuals and installation instructions be followed. However, even if Rottefella's manuals and installation instructions are followed, please note that the Rottefella bindings rely on the integrity of the ski plate to which they are mounted. This plate is factory-installed and glued directly onto the ski by the ski manufacturer, not by Rottefella. Please be aware that inadequate bonding of the plate to the ski may compromise the function and safety of the binding. It is vital to ascertain that the ski and plate are in proper condition before mounting a Rottefella binding to the ski. Any concerns regarding the plate installation must be addressed with the ski manufacturer or retailer prior to use.

Rottefella assumes no liability and provides no warranty, express or implied, for any malfunction, defect, or performance issue of the binding that is caused by improper installation, adhesion failure by the ski manufacturer, or other defects related to the ski plate, which are not Rottefella's liability.


- 1 Find your shoe size:** Turn the heel plate and the binding house with the underside up. Fit the heel plate in the binding house by pressing the forks on the heel plate under the tabs on both sides of the binding house. Fix them in the right position for your shoe size. Turn the binding upright.

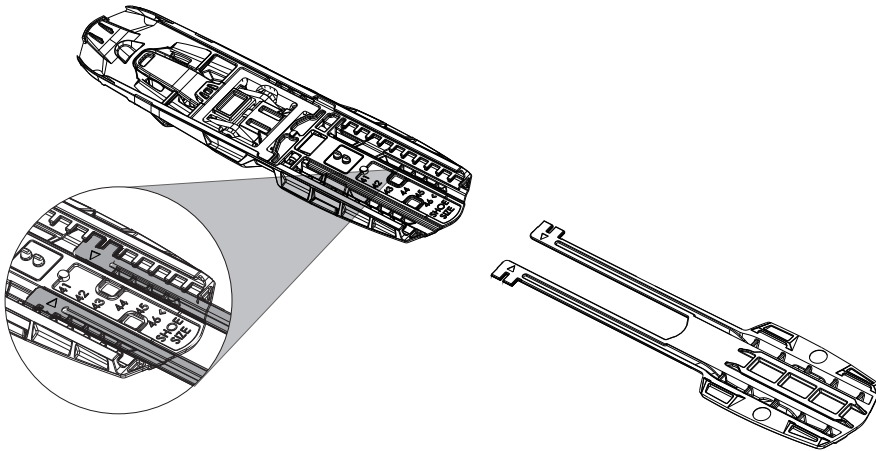

- 2 Mounting the binding:** Lift the Quicklock. Slide the rear of the binding house onto the front of the mounting plate. The tracks on the underside of the binding house should grasp the tracks on the sides of the mounting plate. The heel needs to grasp the heel of the mounting plates. Slide the binding until "0", neutral position, appears in the window. Close the Quicklock and you are ready!

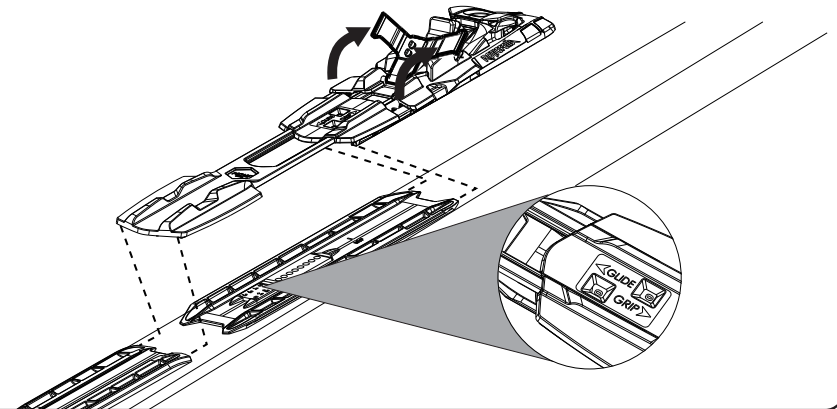

- 3 For better grip:** Lift the Quicklock and push the binding forwards to preferred position, choose between three different positions, +1, +2, +3 for better grip. Close the Quicklock. The position is indicated in the window.

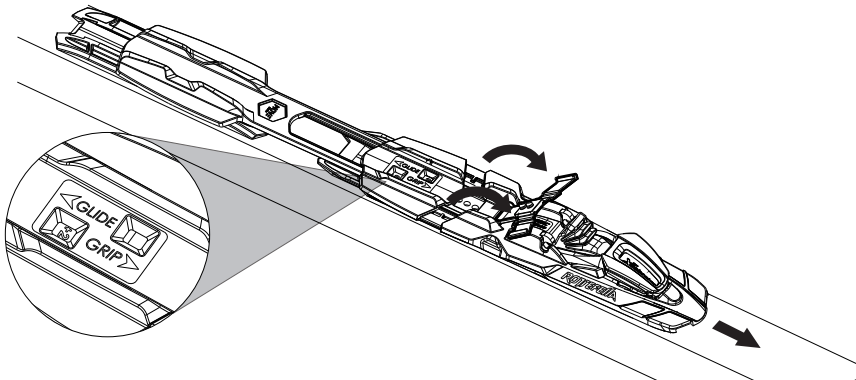

- 4 For better glide:** Lift the Quicklock and push the binding backwards to preferred position, choose between three different positions, -1, -2, -3 for better glide. Close the Quicklock. The position is indicated in the window.

