

ROTTEFELLA®

Xcelerator QuickLock bindings

www.rottefella/quicklock



For Roller ski: Use Xcelerator Roller ski binding with safety screws only in combination with Xcelerator Mounting Plate!


Versions:

Xcelerator Pro Classic
Xcelerator Pro Skate


Compatible Mountingplates:

Rottefella NIS 7 Click Plate
Rottefella NIS 3 Click Plate
Rottefella NIS 1 Click Plate
and Xcelerator Mounting Plate

- 1 Slide the binding onto the NIS plate from the top until it stops (1). Push the binding backwards to "0" neutral position by lifting the rear of the QuickLock™. Slide the heel onto the NIS plate from rear (2). Push forwards to match shoe size by lifting the rear of the heel.

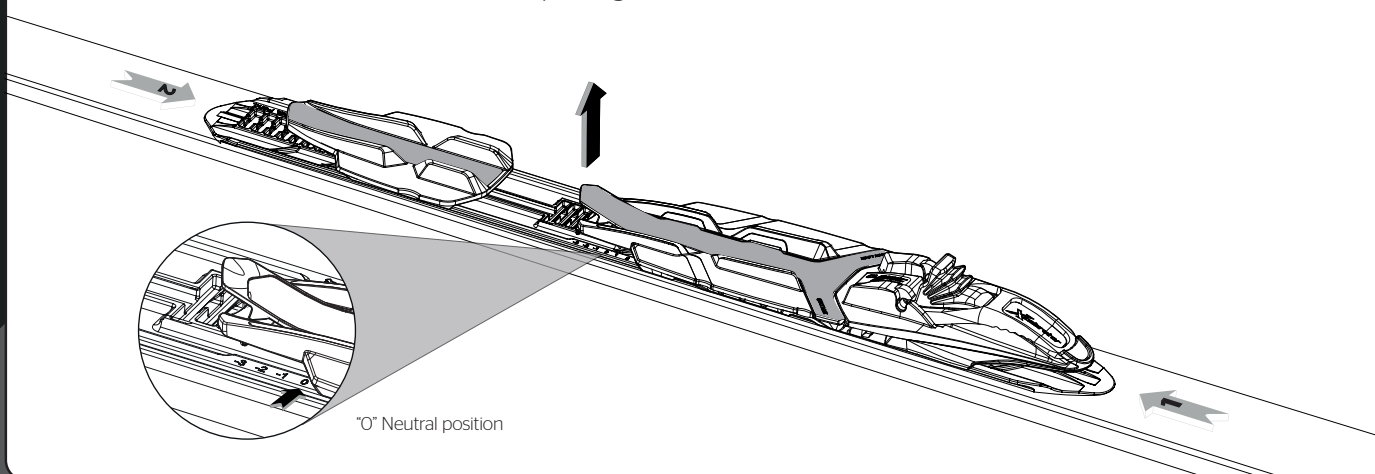


- 2 Move binding **forward**: Lift the front of the QuickLock and push forward to preferred position.

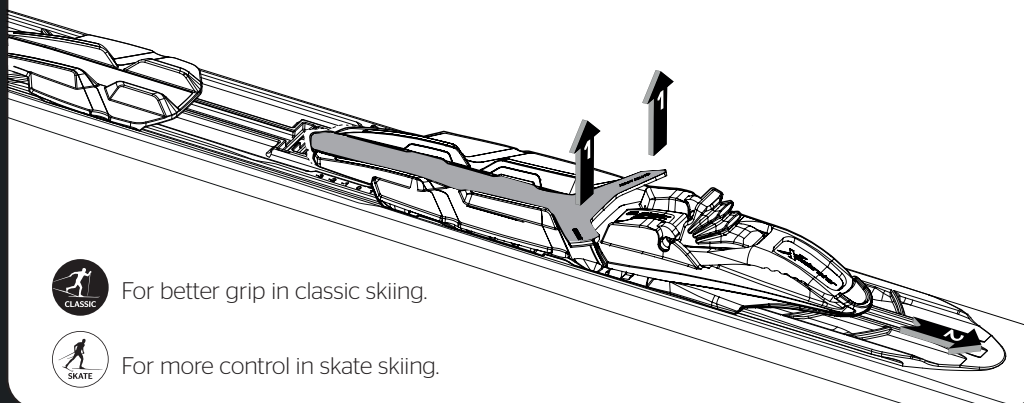

For better grip in classic skiing.

For more control in skate skiing.

- 3 Move binding **backwards**: Lift the rear of the QuickLock and push backwards to preferred position.

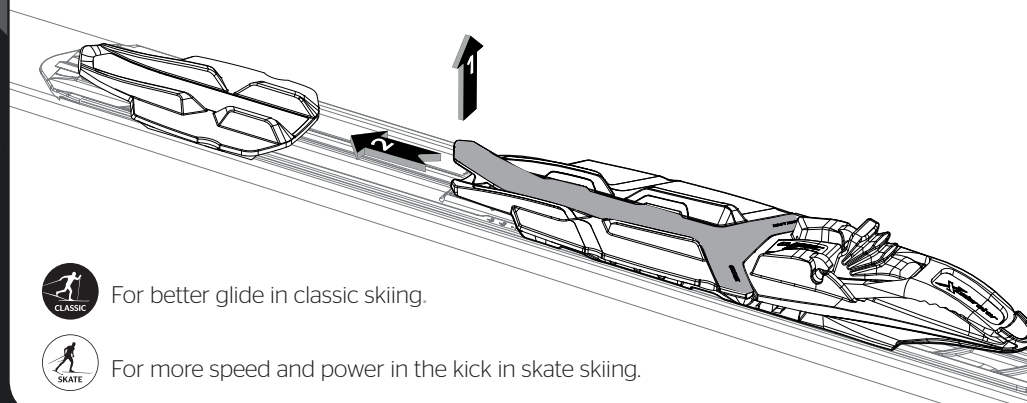

For better glide in classic skiing.

For more speed and power in the kick in skate skiing.