



XCELERATOR PRO CLASSIC & PRO SKATE

Versions:
Xcelerator Pro Classic
Xcelerator Pro Skate


Compatible Mounting plates:
Rottefella NIS 1.0 Mounting plate
Rottefella NIS 3.0 Mounting plate
Rottefella Mounting plate

Disclaimer – Binding Plate Installation


Rottefella bindings are designed and manufactured to meet the highest standards of performance and safety. At all times must Rottefella's manuals and installation instructions be followed. However, even if Rottefella's manuals and installation instructions are followed, please note that the Rottefella bindings rely on the integrity of the ski plate to which they are mounted. This plate is factory-installed and glued directly onto the ski by the ski manufacturer, not by Rottefella. Please be aware that inadequate bonding of the plate to the ski may compromise the function and safety of the binding. It is vital to ascertain that the ski and plate are in proper condition before mounting a Rottefella binding to the ski. Any concerns regarding the plate installation must be addressed with the ski manufacturer or retailer prior to use.

Rottefella assumes no liability and provides no warranty, express or implied, for any malfunction, defect, or performance issue of the binding that is caused by improper installation, adhesion failure by the ski manufacturer, or other defects related to the ski plate, which are not Rottefella's liability.

- 1** Slide the binding onto the NIS plate from the top until it stops [1]. Push the binding backwards to "0" neutral position by lifting the rear of the QuickLock. Slide the heel onto the NIS plate from rear [2]. Push forwards to match shoe size by lifting the rear of the heel.

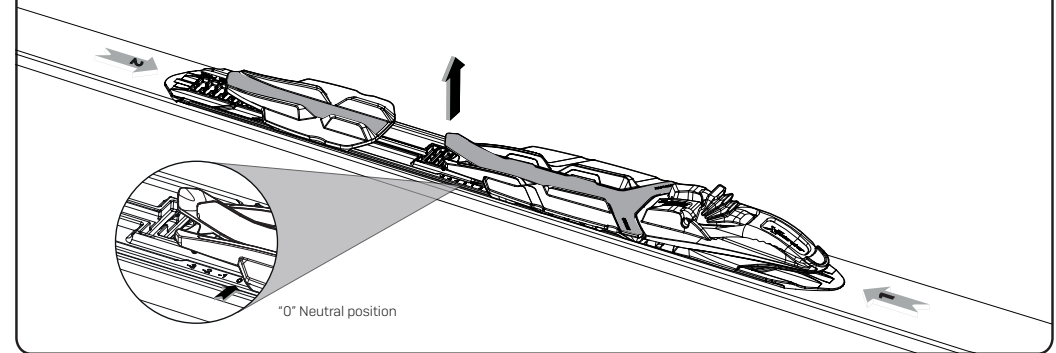

- 2** Move binding **forward**: Lift the front of the QuickLock and push forward to preferred position.

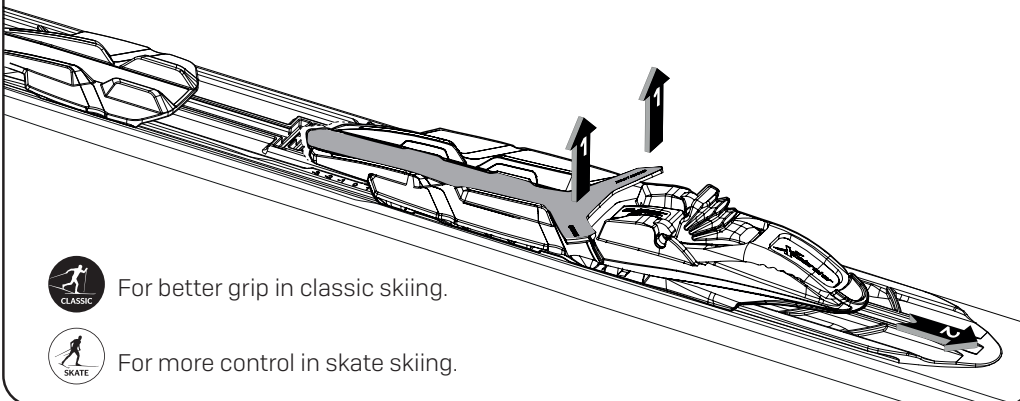

- 3** Move binding **backwards**: Lift the rear of the QuickLock and push backwards to preferred position.

