+This is an example of a boot size 350 mm \oplus \oplus \bigcirc Check if you have small or large bi ritten on the binding). Use the respec \oplus Holes for support plate 2 pcs SMALL PLACE BOOT TIP ONTO THE LINE, MEASURE FROM TIP TO BACK OF THE \oplus \oplus \oplus \bigcirc mm 360 mm and use the respective holes for mounting of the heel, and match Read the value at the back of the heel. 250 | 260 | 270 | 270 | 270 | 270 | 370 | 330 | 330 | 330 | 330 | 350 | 350 | this with the skis centermark. In this case it is 320 mm +++




+

Printing marks

IN ORDER TO GET THE MAXIMUM USE OUT OF MODERN SKI, THE BINDING SHOULD BE MOUNTED ACCORDING TO THE SKIMANUFACTURERS INSTRUCTION ON SKI CENTER MARK.



150 mm

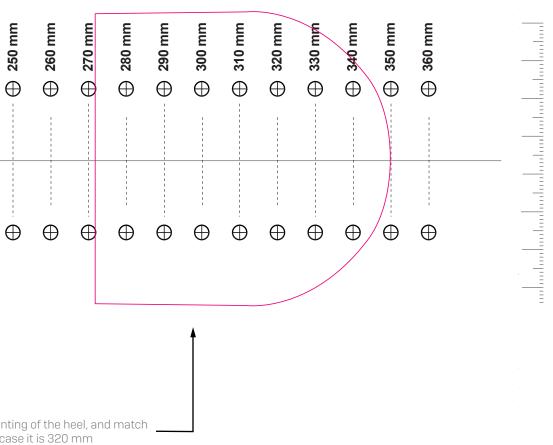

Scale for the position of binding plate and AT- slider



Scale: 1:1

Ringeriksveien 70 3414 Lierstranda, Norway Tlf: +47 32 79 25 20 rottefella.com